BUNK BED INSTRUCTIONS

1.
TAKE OUT THE BED FROM
ITS CASE AND TURN IT
FACING HORIZONTALLY





2.
LIFT THE LATCH TO
OPEN THE BED

3.
OPEN THE FOLDABLE
BED TO A FULL
VERTICAL POSITION



4.
ONCE THE BED IS FULLY
OPEN ENSURE THE LOCK IS
CLICKED ON THE LOCKING
BOLT






5.
UNFOLD THE LEGS
ENSURING THE LEG
LOCK IS PLACED ON
TOP OF THE LEG

6.
CLOSE THE LEG
LOCK ON THE LEG
TO ENSURE THE LEG
IS SAFELY LOCKED



7. USE THE 2 HANDLES TO FLIP THE BED HAVING THE MATTRESS FACE THE TOP

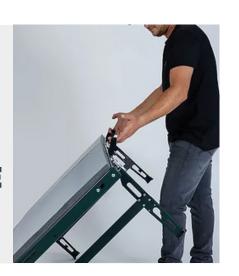



8.
TAKE OUT THE BUNK
BED ASSEMBLY KIT
FROM ITS CASE AND
ENSURE IT INCLUDES:

2 SAFETY BARRIERS



3 STEP LADDER






4 LEGS

9.
TAKE 1 LEG
AND LAY THE
BED ON THE
HINGES



10. MAKE SURE THE LOCKS ON THE LEGS ARE OPEN

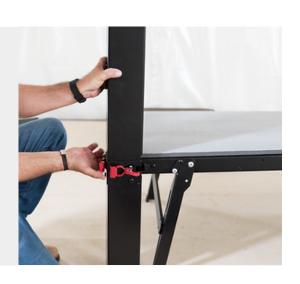



ONCE THE BED IS
PROPERLY LAID ON THE
LEG HINGES INSERT THE
LOCK HOOK INTO
DESIGNATED HOLE
MARKED ON THE LEG
AND LOCK THE LEG
ONTO THE BED FRAME

12. DO THE SAME FOR ALL 4 LEGS





13. ONCE THE BED IS
SAFELY LOCKED ON ALL 4
LEGS ENSURE ALL SAFETY
LOCKS ARE CLOSED
PROPERLY

14.
TILT THE BED
AND KIT
SIDEWAYS TO
HAVE IT LAY ON
THE FLOOR



15.
OPEN THE SECOND
BED FOLLOWING
STEPS 1-6
DESCRIBED EARLIER






16. ONCE THE SECOND
BED IS FULLY OPEN
ATTACH IT TO THE LEGS
FOLLOWING THE STEPS
DESCRIBED EARLIER

17.
AFTER
ENSURING
BOTH THE
LOWER BED
AND THE



BUNK BED ARE PROPERLY
CONNECTED AND LOCKED TO THE
LEGS, LIFT THE BUNK BED AND
CHECK AGAIN THAT EVERYTHING
IS PROPERLY CONNECTED AND
LOCKED SAFELY

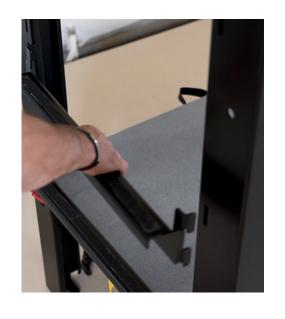

18.
TAKE THE 3-STEP
LADDER AND INSERT
PROPERLY ENSURING
THE LADDER IS
CONNECTED SAFELY

19.
INSTALL THE
SAFETY BARRIERS
BY "TILTING &
CLICKING" THEM
ON TO THE BED
FRAME





20.

IF NEEDED, YOU CAN LOCK THE LEGS OF THE TOP BUNK FROM THE LOWER BED BY WRAPPING THE BED HANDLES ON TO THE BOTTOM FRAMES OF THE TOP BUNK BED

21. ENJOY!





OUTDOORS